

Diversey™

suma®

DIME Mini Method Card

Available in 30gm tablet + 15gm granules



Use for cleaning:



Crockery, Cutlery, Glassware

* Specially designed for under the counter dishwashers and glass washers



Check SDS for detailed information



1 Open the door of under the counter dishwasher.



2 Lift the strainer if available.



3 Tear and empty the pouch with the tablet over the wash tank. Go straight to this step if strainer is not available.



4 Place the strainer back to its position.



5 Start machine and fill with water.



6 The machine is now ready for operation.



7 Remove scraps of food from crockery and rinse heavily soiled articles before loading into the machine.



8 Start the wash cycle for 1 min 45 sec. Recommended temperature is 55-60 deg c.



9 Start the rinse cycle for 10 sec. Recommended temperature is 80-85 deg c.



10 Kitchen ware is clean and ready.



11 The tablet remains at its fixed position inside the wash tank. It is designed to last up to 30 wash cycles.



12 Once it is completely dissolved or the machine is cleaned and filled with fresh water, replace it with a new tablet.

Descaling to be done once in a week using Suma Scale (1:10).